

### FANUC Macro Argument Specifications

Note – G, L, N, O, P cannot be used in macro arguments.

A	#1
B	#2
C	#3
D	#7
E	#8
F	#9
H	#11
I	#4
J	#5
K	#6
M	#13
Q	#17
R	#18
S	#19
T	#20
U	#21
V	#22
W	#23
X	#24
Y	#25
Z	#26